


1. DETERMINE LOCATION OF MODULAR DRAWER(S) ON THE SHELVING SECTIONS. NOTE THAT THERE SHOULD BE A SHELF MOUNTED ABOVE THE TOP EDGE OF THE DRAWER FRONT AND THE DISTANCE BETWEEN THE TOP OF THE DRAWER FRONT AND THE BOTTOM OF THE SHELF SHOULD NOT EXCEED 6 1/4".
2. BOLT THE ATTACHMENT CLIPS TO BOTH THE FRONT AND REAR TEE POSTS OF EACH UPRIGHT USING (1) 5/16-18 X 5/8" SLOTTED ROUND HEAD MACHINE SCREW AND (1) 5/16-18 WAFFLE BACK HEX NUT PER ATTACHMENT CLIP.
3. ATTACH THE DRAWER GUIDES TO THE ATTACHMENT CLIPS. SLIDE THE REAR TANG INTO THE SLOT OF THE BACK ATTACHMENT CLIP AND THE FRONT TANG INTO THE SQUARE SLOT OF THE FRONT ATTACHMENT CLIP. MAKE CERTAIN THE DRAWER GUIDE IS LEVEL AND THAT THE LEFT HAND AND RIGHT HAND DRAWER GUIDES ARE PARALELL TO EACH OTHER.
4. MAKE CERTAIN THAT THE FRONT OF THE DRAWER GUIDE IS PUSHED DOWN AND THAT THE BOTTOM TAB IS CENTERED ON THE SQUARE SLOT. BEND IN THE BOTTOM TAB WITH A SCREWDRIVER SO THAT THE DRAWER GUIDE IS LOCKED IN PLACE.
5. INSTALL THE DRAWER CARRIER ASSEMBLY OR ASSEMBLIES AND THE DRAWER OR DRAWERS.

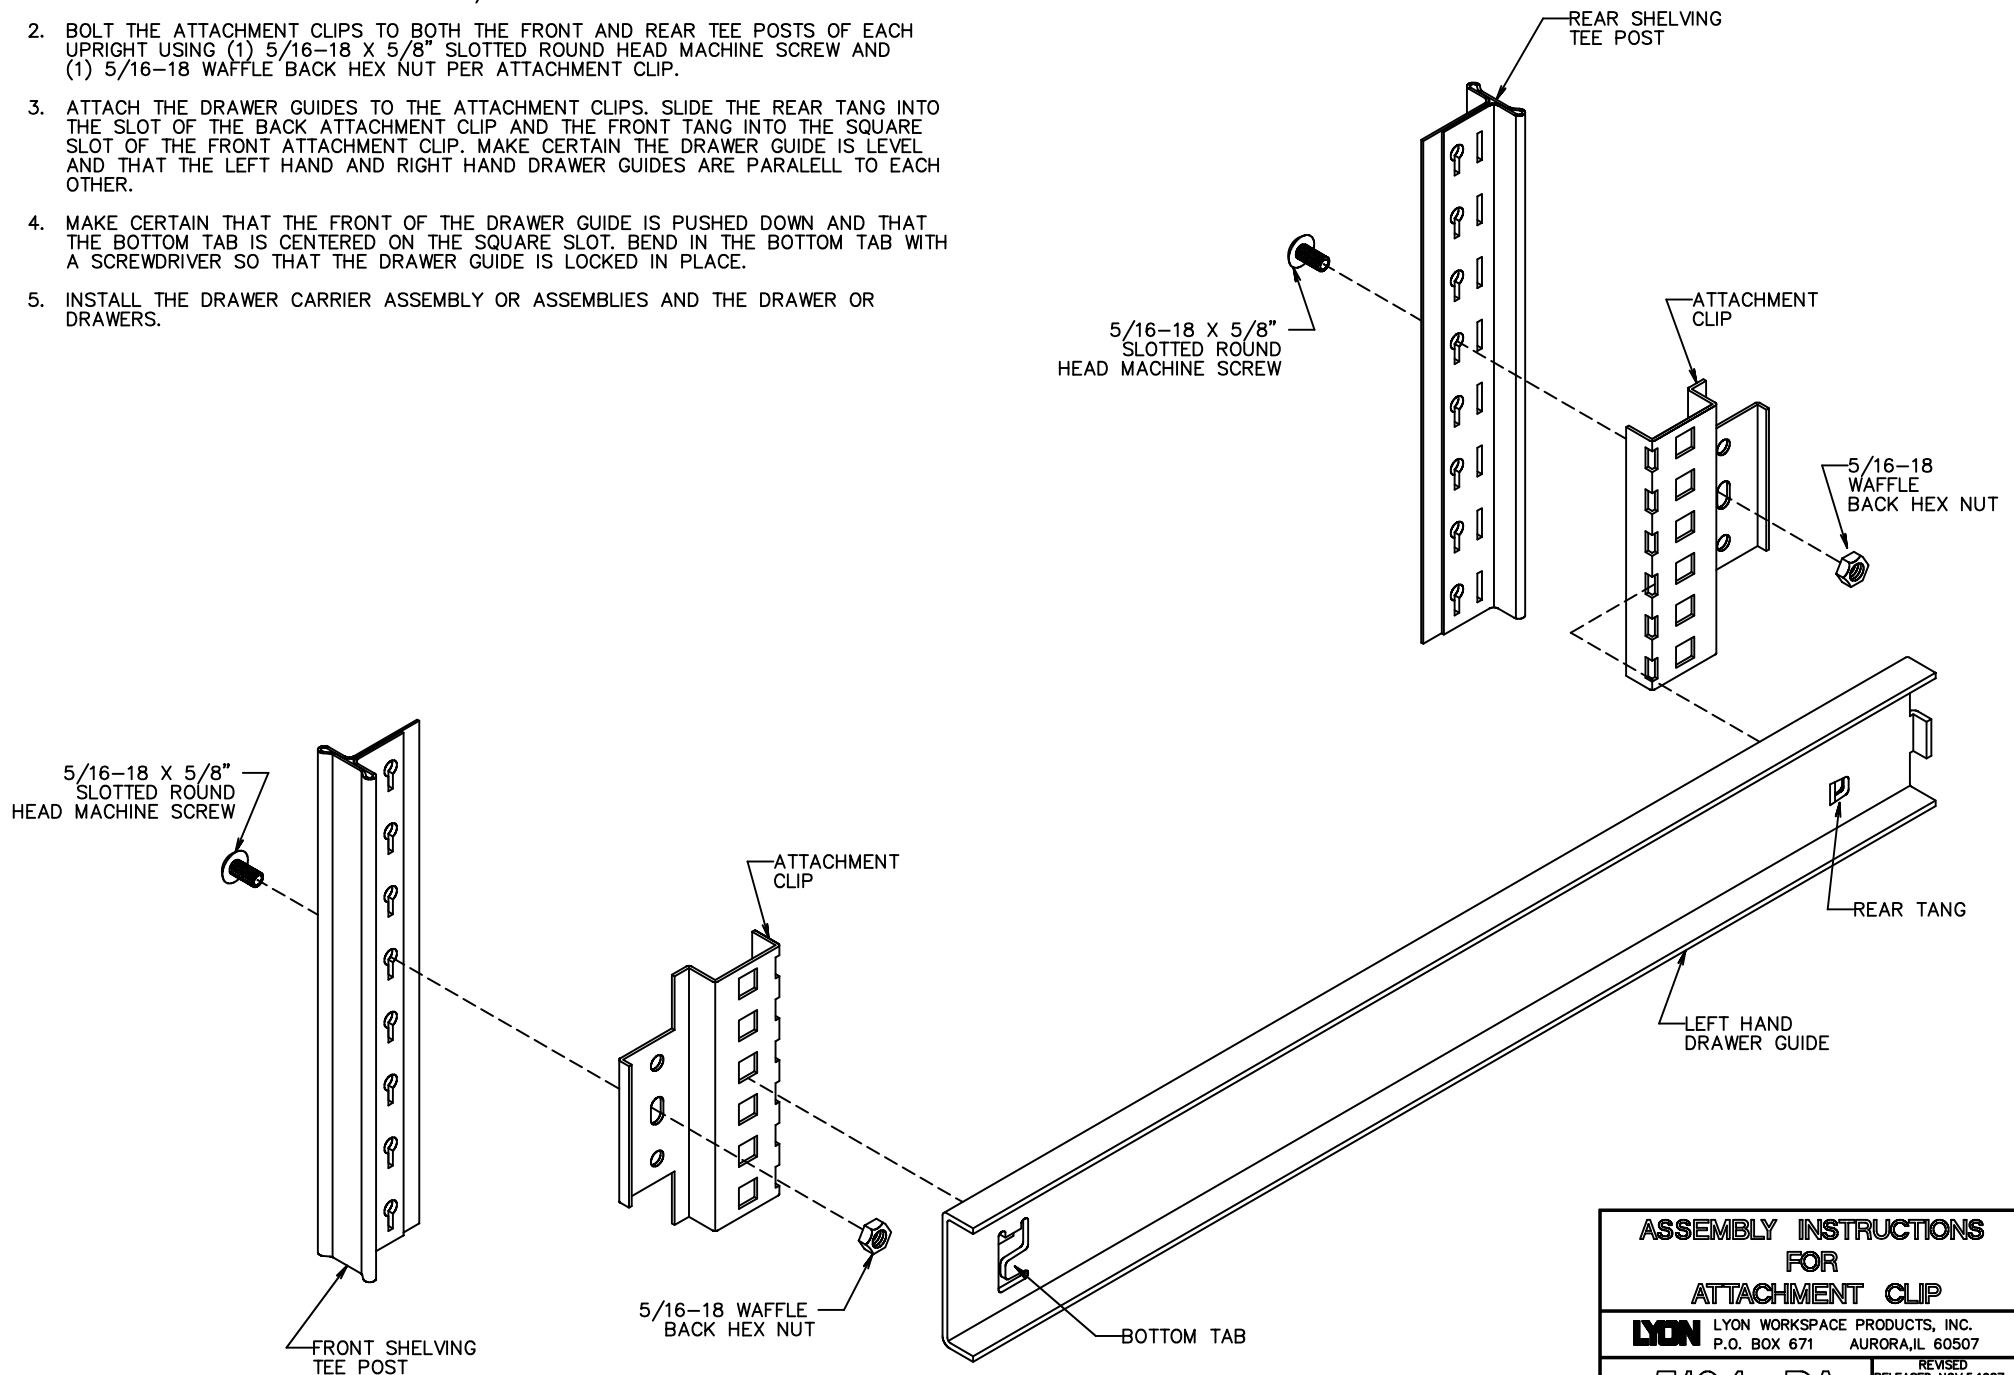

**ASSEMBLY INSTRUCTIONS  
FOR  
ATTACHMENT CLIP**

**LYON** LYON WORKSPACE PRODUCTS, INC.  
P.O. BOX 671 AURORA, ILL. 60507

**5164-DA**

REVISED  
RELEASED NOV. 5, 1987