


LEFT SIDE OF CABINET

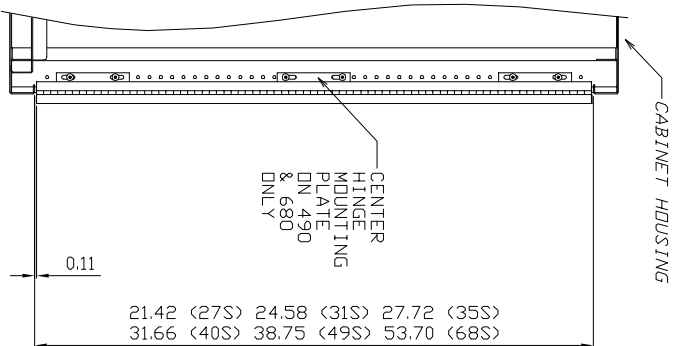

RIGHT SIDE OF CABINET



SCREW DOOR ASSEMBLY TO CABINET HOUSING USING FOUR (4) 1/4-20x1/2 TORX PAN HEAD SELF-TAPPING SCREWS. 9SP0230/103383.
 * (WHEN ASSEMBLING A 49 or 68 SEGMENT DOOR, ATTACH WITH SIX (6) SCREWS.)
 ASSEMBLE DOOR STOPS AT LOCATIONS SHOWN USING FOUR (4) 1/4-20x1/2 TORX PAN HEAD SELF-TAPPING SCREWS. 9SP0230/103383.
 INSERT MAGNETS INTO SLOTS OF DOOR STOPS.
 ATTACH STRIKE TO TOP DOOR STOP USING #10-24x5/16 SELF-TAPPING SCREWS. 9SP0118/102200.
 ADJUST DOOR FOR FIT, TIGHTEN SCREWS.

LYON
 P.O. Box 671
 AURORA, IL 60507-0671
 PHONE: 630-992-8841
 FAX: 800-987-4681

NOTICE: THIS IS A CONFIDENTIAL DISCUSSION LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY
 DATE: 01-28-12
 DRAWN BY: JR
 CHECKED BY: DWV

DESCRIPTION: INSTALLATION SWING DOOR STD 22/30/36W MDC

| | | |
|-------|----------------|-----|
| SHEET | DRAWING NUMBER | REV |
| 1 | SS1361 | 1 |

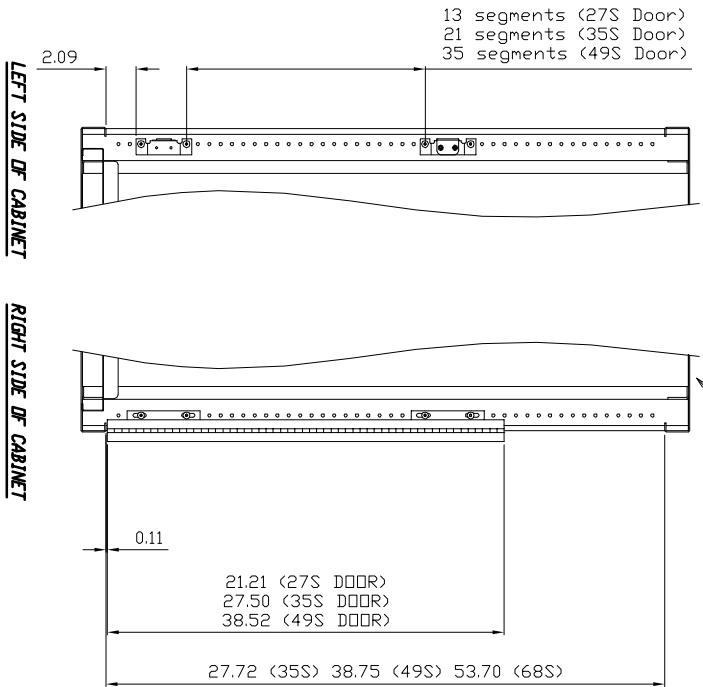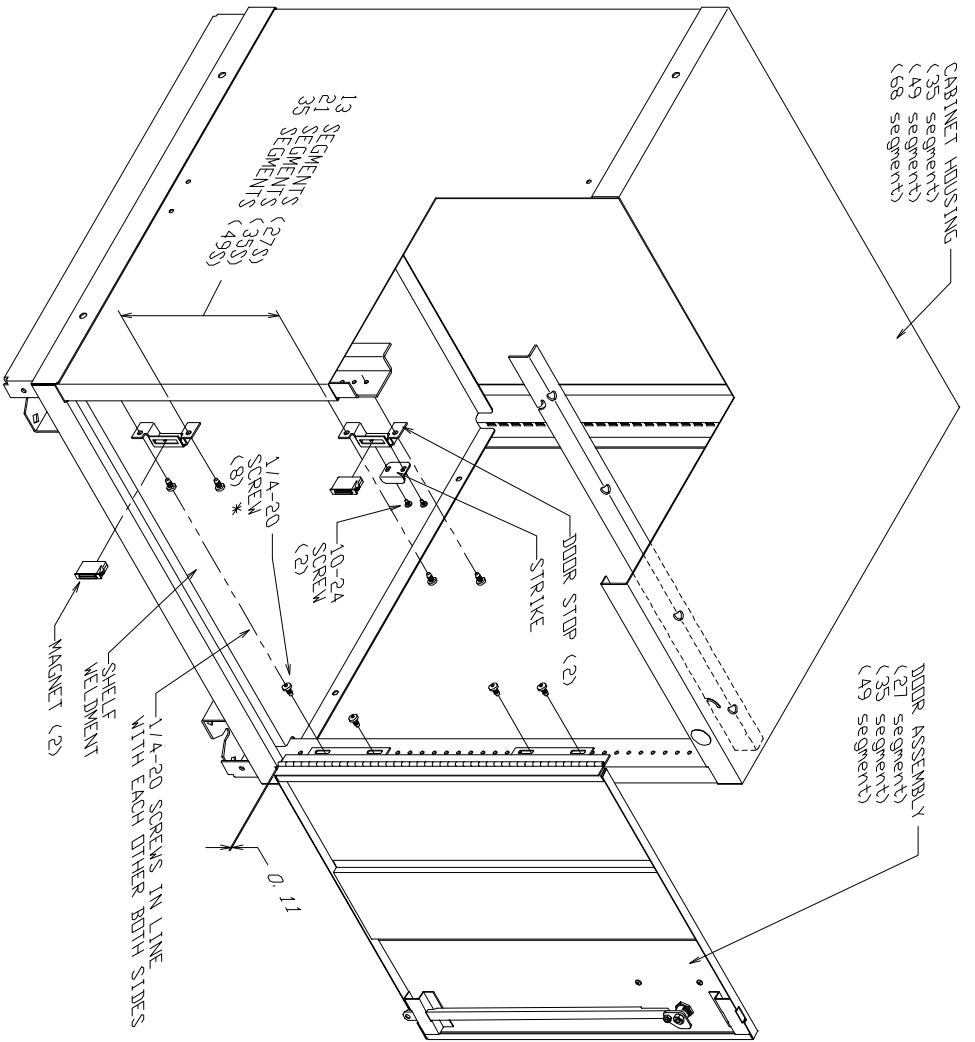

SCREW DOOR ASSEMBLY TO CABINET HOUSING USING FOUR (4) 1/4-20x1/2 TORX PAN HEAD SELF-TAPPING SCREWS. 9SP0230/103383.
 * (WHEN ASSEMBLING A 49 SEGMENT DOOR, ATTACH WITH SIX (6) SCREWS.)

ASSEMBLE DOOR STOPS AT LOCATIONS SHOWN USING FOUR (4) 1/4-20x1/2 TORX PAN HEAD SELF-TAPPING SCREWS. 9SP0230/103383.

INSERT MAGNETS INTO SLOTS OF DOOR STOPS.

ATTACH STRIKE TO TOP DOOR STOP USING #10-24x5/16 SELF-TAPPING SCREWS. 9SP0118/102200.

ADJUST DOOR FOR FIT, TIGHTEN SCREWS.

P.O. Box 671
 AURORA, IL 60507-0671
 PHONE: 630-892-8841
 FAX: 800-367-4681

NOTICE: THIS IS A CONFIDENTIAL DISCLOSEURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY

| | | |
|----------|----------|------------|
| DATE | DRAWN BY | CHECKED BY |
| 01-28-12 | JR | DWV |

DESCRIPTION

INSTALLATION

SWING DOOR COMBO 22/30/36W

MDC

| | | |
|-------|----------------|-----|
| SHEET | DRAWING NUMBER | REV |
| 2 | SS1361 | 1 |