 3/8-16 SERRATED  
FLANGE LOCKNUT

 3/8-16 x 1 HEX  
HEAD MACHINE SCREW

**SUPPLIED FASTENERS**

BOOKCASE CABINET  
SHELVES AND DOORS  
REMOVED FOR CLARITY

ACCESS HOLES (4)  
FOR WALL MOUNT  
(SEE NOTE BELOW)

CLOSURE TAB

BOOKCASE CABINET  
SHELVES AND DOORS  
REMOVED FOR CLARITY

3/8-16x1 HEX HEAD  
MACHINE SCREW

ACCESS SLOTS (4)  
FOR ATTACHING TO  
RISER TOP PAN

RISER TOP PAN

3/8-16  
SERRATED  
FLANGE  
LOCKNUT

ACCESS HOLES (4)  
FOR GANGING

**CABINET TO CABINET**


REMOVE BOTH SHELVES FOR  
ACCESSABILITY TO INSIDE OF  
CABINETS. WITH A SCREWDRIVER,  
BEND UP THE CLOSURE TABS OF  
ADJACENT UNITS, AND ATTACH  
WITH FOUR (4) BOLTS AND NUTS.  
REPLACE SHELVES INTO ORIGINAL  
POSITIONS.

**CABINET TO RISER PAN**

REMOVE BOTH SHELVES FOR  
ACCESSABILITY TO INSIDE OF  
CABINETS. ATTACH WITH TWO (2)  
NUTS AND BOLTS PER CABINET.  
REPLACE SHELVES INTO ORIGINAL  
POSITIONS.

**WALL ATTACHMENT**

DUE TO VARIATIONS IN WALL  
CONSTRUCTION, FASTENERS MUST  
BE SUPPLIED BY INSTALLER.  
TO ATTACH TO WALL, USING A  
SCREWDRIVER, BEND UP THE  
CLOSURE TABS AT THE BACK  
OF THE CABINET.  
SHELVES WILL NEED TO BE  
REMOVED TO PERFORM THIS TASK.

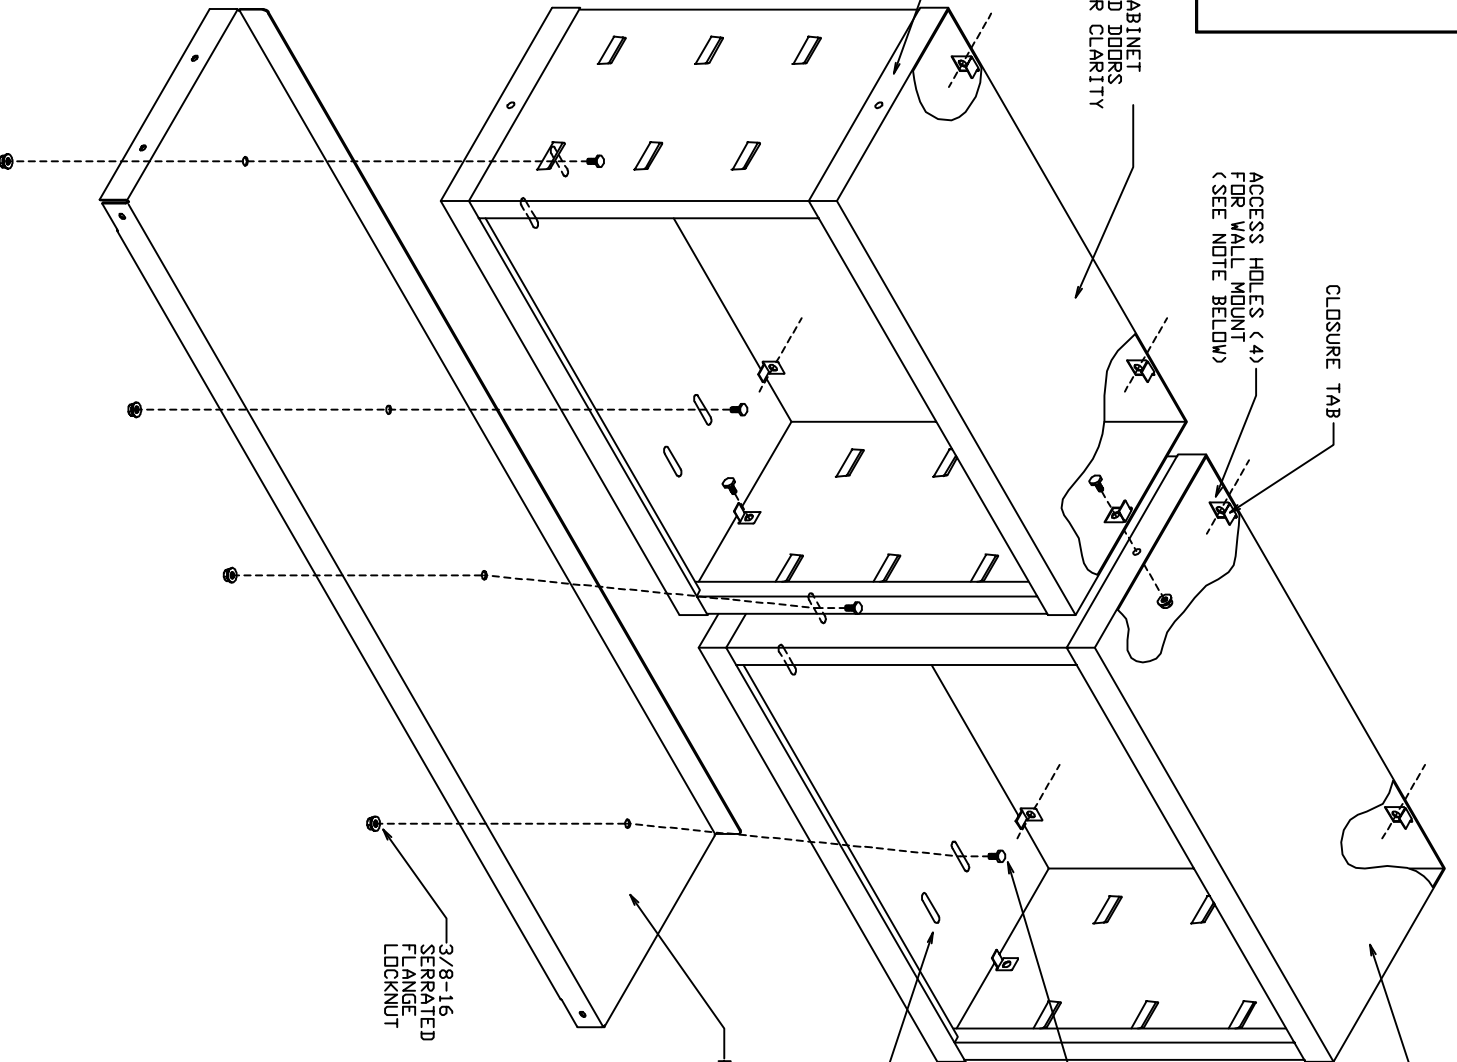

**LYON**

P.O. Box 671  
AURORA, IL 60507-0671  
PHONE: 630-892-8941  
FAX: 800-367-6681

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE, LOANED BY  
LYON WORKSPACE FOR REFERENCE PURPOSES ONLY.

DATE	DRAWN BY	CHECKED BY
07-19-12	JR	DWV

DESCRIPTION

INSTALLATION  
BOOKCASE INSTALLATION

MDC

SHEET	DRAWING NUMBER	REV
1	SS1626	1