


# ASSEMBLY INSTRUCTIONS

THE BACK PANEL IS USED IN PLACE OF THE SUPPORT PANEL. IF THE SUPPORT PANEL HAS ALREADY BEEN ATTACHED, REMOVE AND DISCARD.

ASSEMBLE BACK PANEL AS SHOWN USING 1/4-20x9/16 CARRIAGE SCREWS AND 1/4-20 FLANGED NUTS. THE BACK PANEL WILL BE ON THE "INSIDE" OF THE LEGS.

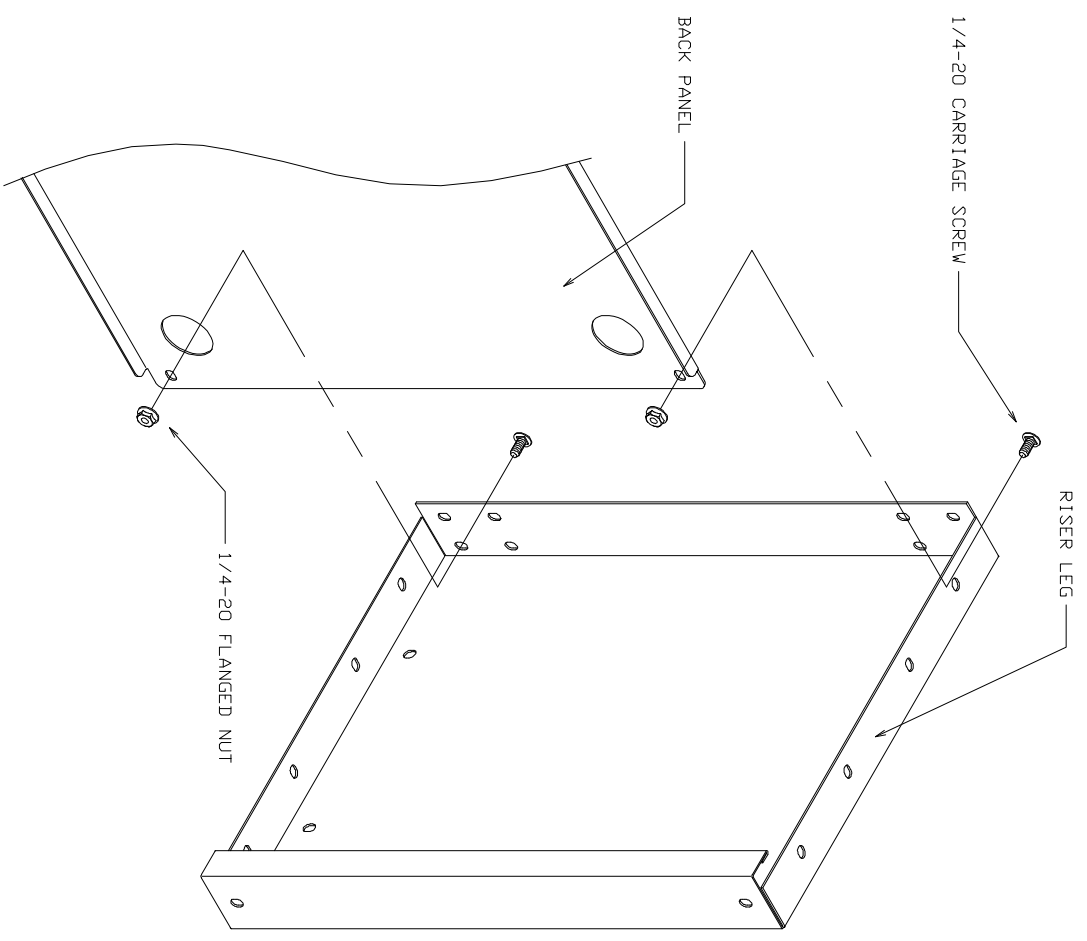

**SUPPLIED HARDWARE**



1/4-20 FLANGED NUT



1/4-20 CARRIAGE SCREW



P.O. Box 671  
 AURORA, IL 60507-0671  
 PHONE: 630-892-8841  
 FAX: 800-367-4681

NOTICE: THIS IS A CONFIDENTIAL DISCLOSURE LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY

DATE	DRAWN BY	CHECKED BY
01-31-12	JR	DWV

DESCRIPTION  
 INSTALLATION  
 RISER BACK PANEL  
 MDC

SHEET	DRAWING NUMBER	REV
-	SS1666	1