
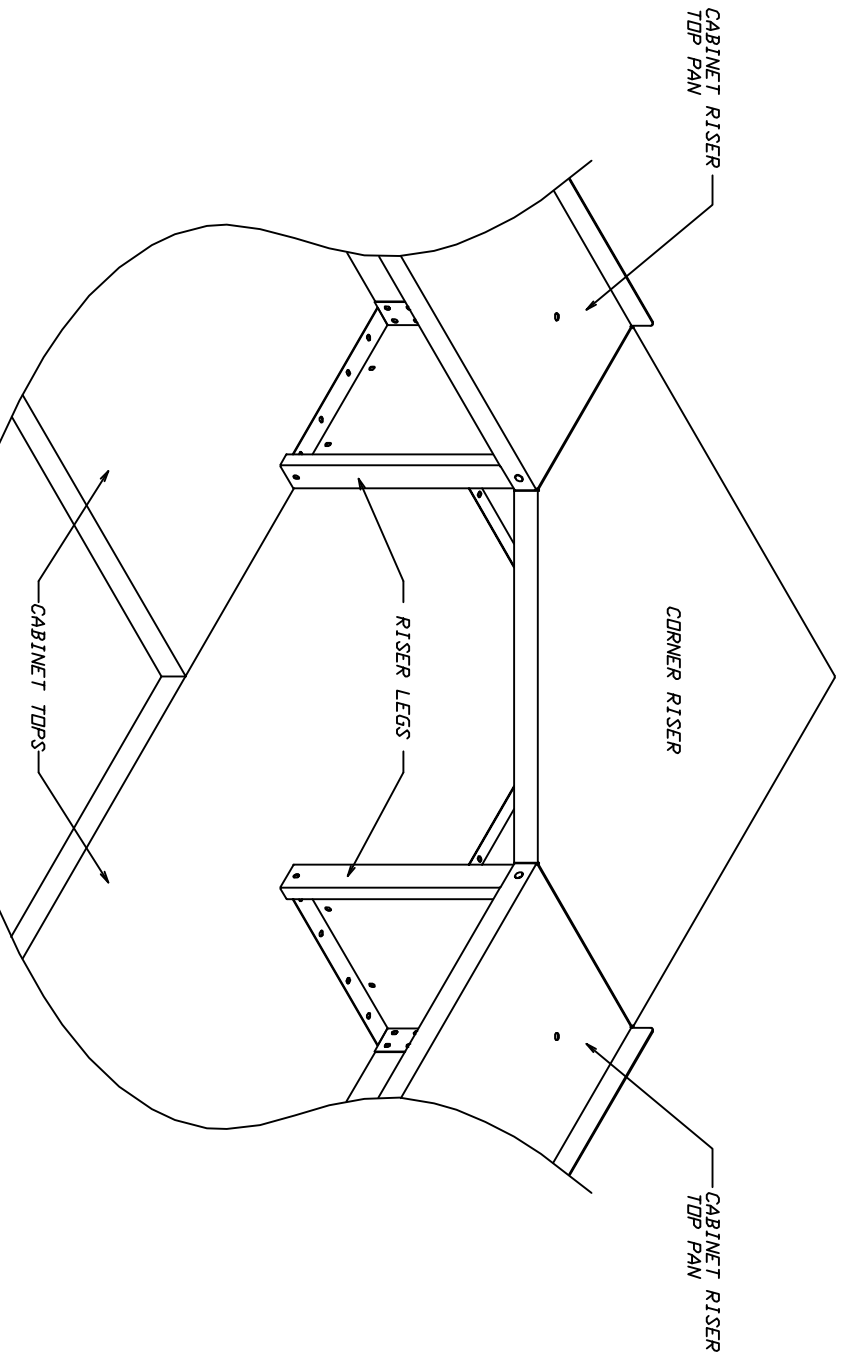


ASSEMBLY INSTRUCTIONS

FINISH ASSEMBLING CORNER RISER BY ATTACHING IT TO BOTH ADJACENT CABINET RISERS. ATTACH USING SUPPLIED 1/4-20 x 9/16" CARRIAGE SCREWS AND 1/4-20 FLANGED NUTS THAT ARE USED TO ATTACH RISER LEGS TO RISER TOP PAN.

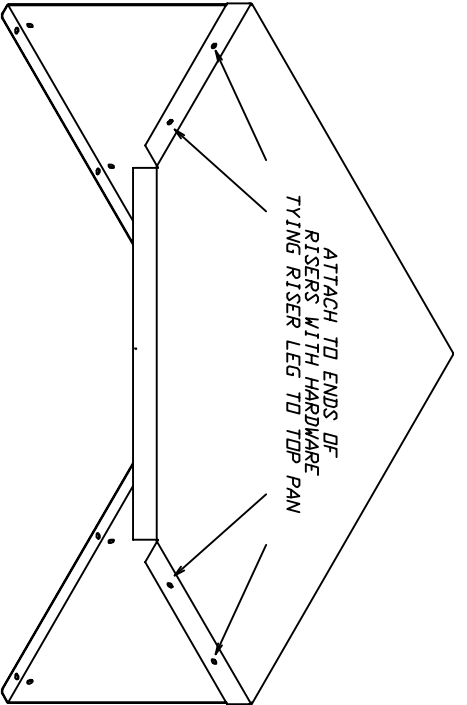

LYON

P.O. Box 671
AURORA, IL 60507-0671
PHONE: 630-892-8941
FAX: 800-367-6681

NOTICE: THIS IS A CONFIDENTIAL DISCUSSION, LOANED BY LYON WORKSPACE FOR REFERENCE PURPOSES ONLY.

DATE 07-19-12 DRAWN BY JR CHECKED BY DMV

DESCRIPTION

INSTALLATION
CORNER RISER INSTALLATION

MDC

SHEET	DRAWING NUMBER	REV
2	SS1670	1